



Basket Strainers

92 Series

Same Side, Flat Bottom Design

Same Side, Domed Bottom Design

- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange sizes from 2" to 36"

ASME Code ("U" or "UM") and non-code design fabricated basket strainers



SUITABLE USES



Air & Gas



Desalination



Coolant



Water



Electronics



Coatings



Oil & Gas



Chemical



Pulp & Paper



Power



Marine



Equipment

RATINGS

- ASME Class 150
- ASME Class 300
- ASME Class 600
- ASME Class 900
- ASME Class 1500
- ASME Class 2500

DESIGN PRESSURE

Up to 3700 @ 800° F (427° C)

AVAILABLE MATERIALS

Carbon or Stainless Steel 304 or 316, C276, AL6XN, 2205, 2507 & Monel 400, Titanium and other materials.

ADDITIONAL FEATURES

Swing bolt or thru-bolt closures available
Domed bottom and flat bottom configurations



Certified to
NSF/ANSI/CAN 61

For more information, e-mail:
info@fil-trek.com or visit Fil-Trek.com

Basket Strainers


92 Series | Fabricated Basket Strainers

- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange Sizes from 2" to 36"




STRAINER SPECIFICATIONS


Configuration	92A - Same side, flat bottom w/ swing bolt closure 92B - Same side, flat bottom w/ thru bolt closure 92C - Same side, domed bottom w/ swing bolt closure 92D - Same side, domed bottom w/ thru bolt closure
Cover	Flat cover for 10" and smaller Domed cover for 12" and larger <i>Cover lifting lug standard on all strainers 10' and larger</i>
Basket Options	Single basket (std) <i>Multi-basket configuration available based on sizing</i>
Inlet/Outlet	2" TO 36" <i>Larger sizes available, contact Fil-Trek</i>
Vent	1/2"
Certifications	U, UM, CE, NB, CRN, CE

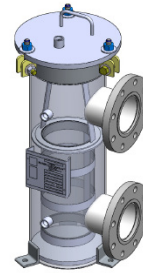


92A Series

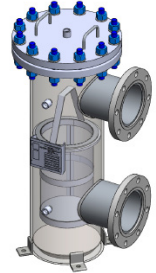

92B Series

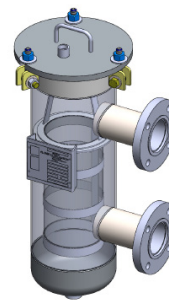

92C Series

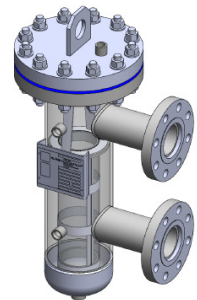

92D Series

PRESSURE & TEMPERATURE DESIGNATION

DESIGNATION	MOC	PSI	TEMP (°F)	ANSI RATING	DESIGNATION	MOC	PSI	TEMP (°F)	ANSI RATING
PT1	CS	280	100	ANSI 150	PT7	CS	2215	100	ANSI 900
	SS304/SS316	270				SS304/SS316	2155		
PT2	CS	195	400	ANSI 150	PT8	CS	1895	400	ANSI 900
	SS304/SS316	185				SS304/SS316	1485		
PT3	CS	735	100	ANSI 300	PT9	CS	3700	100	ANSI 1500
	SS304/SS316	715				SS304/SS316	3595		
PT4	CS	630	400	ANSI 300	PT10	CS	3165	400	ANSI 1500
	SS304/SS316	490				SS304/SS316	2480		
PT5	CS	1475	100	ANSI 600	PT11	CS	6165	100	ANSI 2500
	SS304/SS316	1435				SS304/SS316	5995		
PT6	CS	1260	400	ANSI 600	PT12	CS	5275	400	ANSI 2500
	SS304/SS316	990				SS304/SS316	4130		

*Table above based on ANSI flange ratings. Fil-Trek will design based on application pressure and temperature requirements.

**Max temperature may be limited to gasket material.

Basket Strainers

92 Series | Fabricated Basket Strainers

- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange Sizes from 2" to 36"



STRAINER OPTIONS

*Indicates standard configuration

Series /Style	92A - Same side w/ Swing-bolt closure	Basket/Mesh Options	PERF OPTIONS	MESH OPTIONS
Configuration	92B - Same side w/ ANSI thru-bolt closure	<i>(See Screen Openings chart for more options)</i>	1/8" *	10
Options	92C - Same side, domed bottom w/ swing bolt closure		3/16"	20
	92D - Same side, domed bottom w/ thru bolt closure		1/4"	30
			3/8"	40
			1/2"	50
			5/8"	60
			3/4"	80
			7/8"	100
			1"	120
Connection Options**	- Raised Face Flange* Other Available Options: BW - Butt Weld (Sch 10 to 160) Flat Face Flange Ring Joint Flange Grooved Socket Weld NPT Threaded Wafer Flat Face (Smooth Finish) Wafer Flat Face (Serrated Finish) Wafer Ring Joint <i>**Based on standard of construction</i>	Cover Options**	Predetermined by Series Number* Other Available Options: Bolted Cover (Gasket Seal) w/ Davit Yoke Cover (O-Ring Seal) Quick Opening Threaded Cover (O-Ring Seal) Quick Opening C-Clamp Cover (O-Ring Seal) Grooved <i>**Based on standard of construction</i>	
Finish Options	(-) External paint "National Blue" (std for carbon steel housings)* (-) Bead Blast (std for stainless steel 304 and 316)* EP1 - Electro polish Inside/Outside EP2 - Inside only EP3 - Outside only PP - Passivation	O-Ring/Gasket Options	For 92A/92C BN - Buna-N* EP - EPDM VI - Viton SI - Silicone TEV - Teflon encap. Viton For 92B/92D Spiral Wound Flexitallic* Garlon Vegetable Fibre <i>Other materials available, contact factory</i>	
Leg Options	Leg tabs* (std for flat bottom) No legs* (std for domed bottom) Other Available Options: Angle Iron Legs Skirt			

PRODUCT NOMENCLATURE

S4	92A	10	6	F	PT2	-
MOC	MODEL	BODY DIAMETER	INLET/OUTLET	CONNECTION	PRESSURE CLASS	ADDITIONAL OPTIONS
(-) CARBON STEEL **S4 - SS304 **S6 - SS316	92A 92B 92C 92D	See tables on proceeding pages for body diameter	See tables on proceeding pages for inlet/outlet sizing	F - Raised Face Flange See "Strainer Options" above for other options	See Pressure & Temperature Designation table	See "Strainer Options" above for: Finish options Basket Perf/Mesh options O-Ring/Gasket options Cover/Headlift Options Leg options

*For sizing for your application, please contact factory

**NSF/ANSI 61 certification available for SS304 and SS316 (S492/S692).



55 Stafford Court, Cambridge, ON N1T 1B3 P (519) 623-7448 F (519) 623-8807

For more information, e-mail: info@fil-trek.com or visit Fil-Trek.com

Basket Strainers

92 Series | Fabricated Basket Strainers

- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange Sizes from 2" to 36"



MODEL DIMENSIONAL DETAILS

92A/92C Series (Same Side w/ Swing Bolt) | 150#, 300#

INLET/ OUTLET	BODY DIA.	150#							300#						
		A	B	C	D	E	F	G	A	B	C	D	E	F	G
2"	6"	6.6"	18"	6"	8"	23"	11"	28"	Contact Fil-Trek for dimensional information						
3"	8"	8.6"	21"	6"	8"	28"	11"	33"							
4"	8"	8.6"	21"	6"	8"	28"	11"	33"							
5"	10"	10.8"	26"	8"	10"	32"	14"	38"							
6"	10"	10.8"	26"	8"	10"	32"	14"	38"							
8"	12"	12.5"	36"	10"	12"	43"	16"	49"							
10"	16"	16.5"	36"	10"	16"	47"	18"	55"							
12"	18"	18.5"	42"	12"	18"	54"	20"	62"							
14"	20"	20.5"	52"	14"	22"	67"	24"	77"							
16"	24"	24.5"	52"	14"	22"	67"	24"	77"							
18"	24"	24.5"	56"	16"	24"	73"	26"	83"							
20"	30"	30.5"	64"	18"	28"	85"	29"	96"							
24"	36"	36.6"	68"	20"	30"	91"	33"	104"							


Available in sizes larger than 24" please contact Fil-Trek

Specifications listed above are for reference only.


All quotes are complete with certified drawing which indicate accurate dimensions and weight.

CHART LEGEND

- A** Body Diameter
- B** Inlet to Floor
- C** Outlet to Floor
- D** Face to Center
- E** Floor to Cover

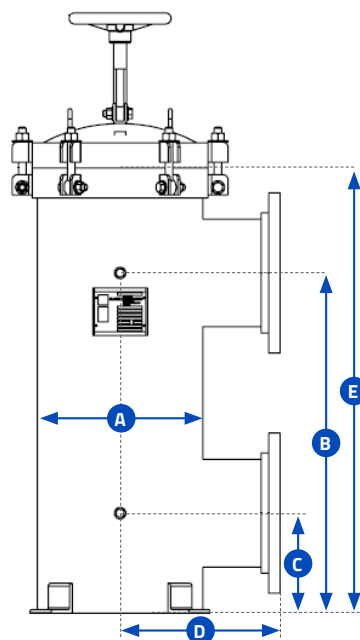

92A Series

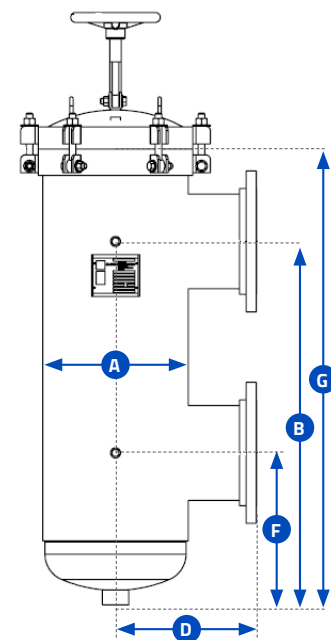

92C Series



55 Stafford Court, Cambridge, ON N1T 1B3 P (519) 623-7448 F (519) 623-8807

For more information, e-mail: info@fil-trek.com or visit Fil-Trek.com

Basket Strainers

92 Series | Fabricated Basket Strainers

- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange Sizes from 2" to 36"



MODEL DIMENSIONAL DETAILS (CONTINUED...)

92A/92C Series (Same Side w/ Swing Bolt) | 600#, 900#

INLET/ OUTLET	BODY DIA.	600#							900#						
		A	B	C	D	E	F	G	A	B	C	D	E	F	G
2"	6"	Contact Fil-Trek for dimensional information Limited sizing, contact Fil-Trek for availability													
3"	8"														
4"	8"														
5"	10"														
6"	10"														
8"	12"														
10"	16"														
12"	18"														
14"	20"														
16"	24"														
18"	24"														
20"	30"														
24"	36"														


Available in sizes larger than 24" please contact Fil-Trek

Specifications listed above are for reference only.


All quotes are complete with certified drawing which indicate accurate dimensions and weight.

CHART LEGEND

- A** Body Diameter
- B** Inlet to Floor
- C** Outlet to Floor
- D** Face to Center
- E** Floor to Cover

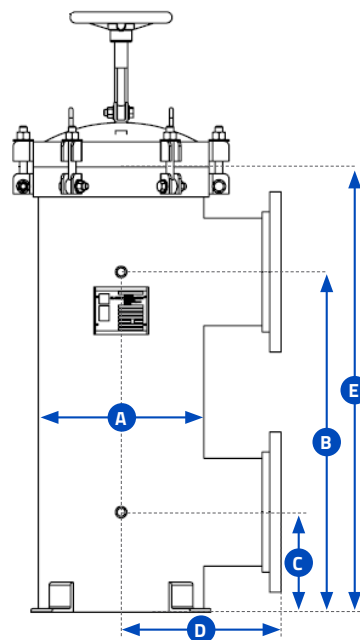

92A Series

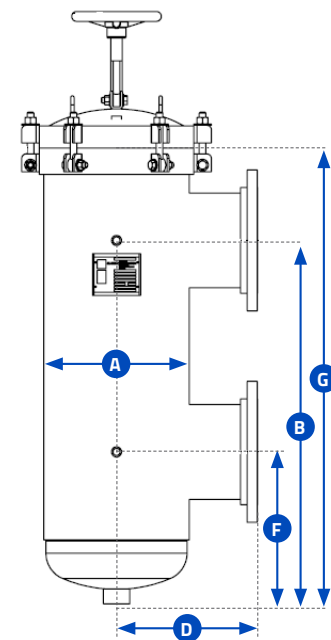

92C Series



55 Stafford Court, Cambridge, ON N1T 1B3 P (519) 623-7448 F (519) 623-8807

For more information, e-mail: info@fil-trek.com or visit Fil-Trek.com

Basket Strainers

92 Series | Fabricated Basket Strainers

- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange Sizes from 2" to 36"



MODEL DIMENSIONAL DETAILS

92B/92D Series (Same Side w/ Thru Bolt)

INLET/ OUTLET	BODY DIA.	150#							300#						
		A	B	C	D	E	F	G	A	B	C	D	E	F	G
2"	6"	Contact Fil-Trek for dimensional information													
3"	8"														
4"	8"														
5"	10"														
6"	10"														
8"	12"														
10"	16"														
12"	18"														
14"	20"														
16"	24"														
18"	24"														
20"	30"														
24"	36"														


Available in sizes larger than 24" please contact Fil-Trek

Specifications listed above are for reference only.


All quotes are complete with certified drawing which indicate accurate dimensions and weight.

CHART LEGEND

- A** Body Diameter
- B** Inlet to Floor
- C** Outlet to Floor
- D** Face to Center
- E** Floor to Cover

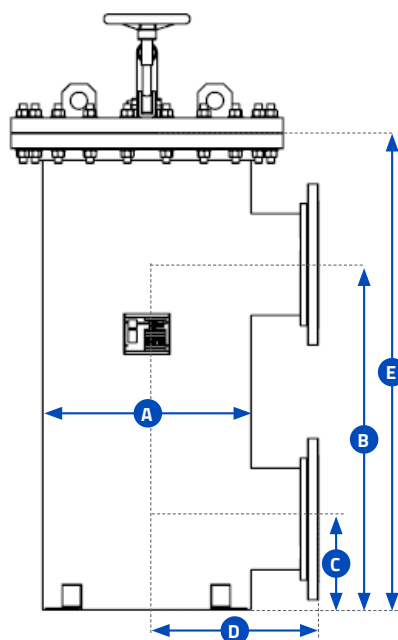

92B Series

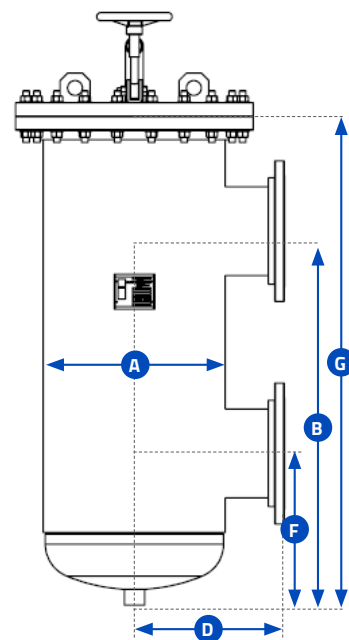

92D Series



55 Stafford Court, Cambridge, ON N1T 1B3 **P** (519) 623-7448 **F** (519) 623-8807

For more information, e-mail: info@fil-trek.com or visit Fil-Trek.com

Basket Strainers

92 Series | Fabricated Basket Strainers

- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange Sizes from 2" to 36"



MODEL DIMENSIONAL DETAILS (CONTINUED...)

92B/92D Series (Same Side w/ Thru Bolt) | 600#, 900#

INLET/ OUTLET	BODY DIA.	600#							900#						
		A	B	C	D	E	F	G	A	B	C	D	E	F	G
2"	6"	Contact Fil-Trek for dimensional information													
3"	8"														
4"	8"														
5"	10"														
6"	10"														
8"	12"														
10"	16"														
12"	18"														
14"	20"														
16"	24"														
18"	24"														
20"	30"														
24"	36"														

92B/92D Series (Same Side w/ Thru Bolt) | 1500#, 2500#

INLET/ OUTLET	BODY DIA.	1500#							2500#						
		A	B	C	D	E	F	G	A	B	C	D	E	F	G
2"	6"	Contact Fil-Trek for dimensional information													
3"	8"														
4"	8"														
5"	10"														
6"	10"														
8"	12"														
10"	16"														
12"	18"														
14"	20"														
16"	24"														
18"	24"														
20"	30"														
24"	36"														

Available in sizes larger than 24", please contact Fil-Trek

Specifications listed above are for reference only.

All quotes are complete with certified drawing which indicate accurate dimensions and weight.

Basket Strainers

92 Series | Fabricated Basket Strainers

- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange Sizes from 2" to 36"



BASKET OPTIONS

We can manufacture replacement and custom basket designs for basket strainers, T strainers, Y strainers, duplex strainers and more.

Single & Multi Basket Design

Single baskets or multi basket design options are primarily based on size of strainer. A large strainer using a single basket can make it difficult to remove and maintain due to its weight. Multiple baskets can make removal much easier especially if overhead cranes or lifts are unavailable.


Custom Basket Design

We can customize our basket design to meet a variety of non-standard requirements. Angled or flat, alternate bottom designs etc.

Material of Construction

We can make strainer baskets in a variety of materials to meet a variety of requirements. Below is an outline of what materials we are capable of using;

- | | | |
|------------------|---------|-------------|
| ■ Carbon steel | ■ AL6XN | ■ Monel 400 |
| ■ SS304 or SS316 | ■ 2205 | ■ Titanium |
| ■ C 276 | ■ 2507 | |

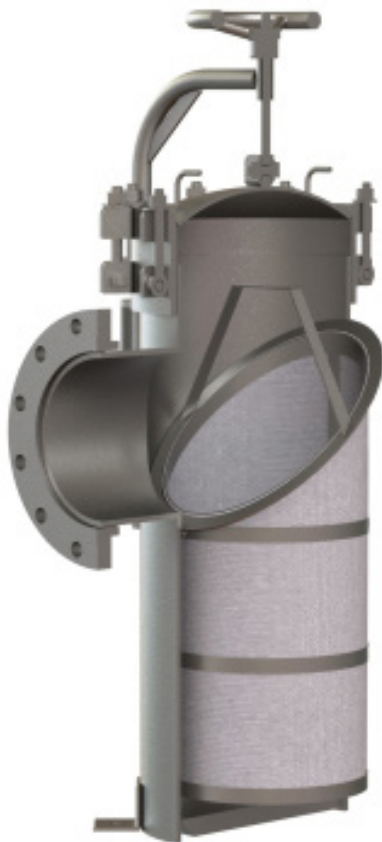

Basket Strainers

92 Series | Fabricated Basket Strainers

- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange Sizes from 2" to 36"



STRAINER APPLICATION WORKSHEET

Please use the following worksheet to enter as much detail as possible about the strainer application you are sizing for. The minimum requirement we need to help size will be the areas marked with an '*':

Operating Conditions

Name of Gas* _____

Max. Operating Flow Rate* _____

Gas Specific Gravity (Air = 1)* _____

Type of System or Location in Process* _____

Min. Operating Pressure (PSIG)* _____

Min. Operating Temperature (F) _____

Amount of Liquids Present (GPD) _____

Amount of Particulate Present (Parts per 100 scf) _____

Max. Allowable Clean Pressure Drop _____

Name of Liquid Present _____

@ _____ Pressure (PSIG)

OR Mole Weight/Composition _____

Dry? ☐ Wet? ☐

Max. Operating Pressure (PSIG) _____

Max. Operating Temperature (F)* _____

Specific Gravity (Water = 1) _____

Name of Particulate _____

(Standard = 2 PSID Flange to Flange)

Mechanical Data

Design Pressure Min.* _____ Max.* _____

ASME Code Required?* _____

If YES, Pressure (PSI) _____ Temp (F) _____

Fire Safe Service _____

Inlet/Outlet Type Flanged ☐ Threaded ☐

Type/ANSI Rating of Flanges (#) _____

Vessel MOC CS ☐ SS304 ☐ SS316 ☐

Internals MOC CS ☐ SS304 ☐ SS316 ☐

Design Temperature Min.* _____ Max.* _____

Sour Service? ☐ Acid Service? ☐

Corrosion Allowance (in) _____

(ie All Connections/Closures Flanged?) _____

Other (Please specify) _____

Face RF ☐ RTJ ☐ Type SO ☐ WN ☐ LWN ☐

Other (Please specify) _____

Other (Please specify) _____

Other Details



55 Stafford Court, Cambridge, ON N1T 1B3 P (519) 623-7448 F (519) 623-8807

For more information, e-mail: info@fil-trek.com or visit Fil-Trek.com


Basket Strainers

92 Series | Fabricated Basket Strainers

- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange Sizes from 2" to 36"



SCREEN/BASKET DESIGN CHECKLIST

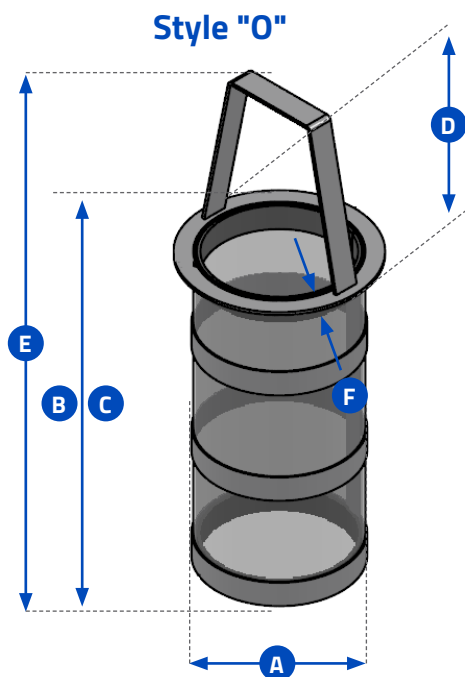

Performance Requirements

Req. Level of Filtration _____

Material of Construction _____

Min. Specified Burst Pressure _____

Flow Direction _____

Dimensional Requirements

Design Style (O or I)

A Basket Outside Diameter _____


B Basket Height - *Shortest* _____

C Basket Height - *Longest* _____

D Ring Outside Diameter _____

E Overall Height _____

F Ring Thickness _____

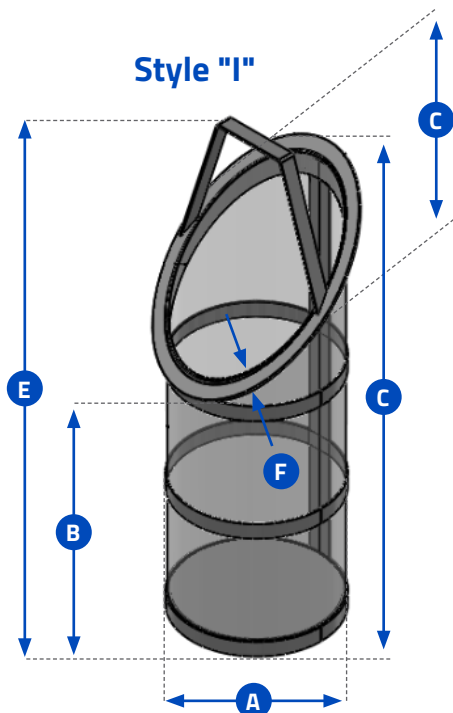

Additional Notes





Basket Strainers

92 Series | Fabricated Basket Strainers

- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange Sizes from 2" to 36"



SCREEN OPENINGS

	100 Mesh	30% O.A. 0.006" Openings
	80 Mesh	31% O.A. 0.007" Openings
	60 Mesh	30% O.A. 0.009" Openings
	40 Mesh	36% O.A. 0.016" Openings
	30 Mesh	41% O.A. 0.021" Openings
	20 Mesh	46% O.A. 0.035" Openings
	0.027" ϕ	23% O.A.
	0.033" ϕ	28% O.A.
	3/64" ϕ	36% O.A.
	1/16" ϕ	23% O.A.
	3/32" ϕ	33% O.A.
	1/8" ϕ	40% O.A.
	5/32" ϕ	63% O.A.
	3/16" ϕ	51% O.A.
	1/4" ϕ	42% O.A.

FACTORS TO CONSIDER

1 Purpose

If the strainer is being used for protection rather than direct filtration, standard screens will suffice in most applications.

2 Service

With services that require extremely sturdy screens, such as high pressure/temperature applications or services with high viscosities, perforated screens without mesh liners are recommended. If a mesh liner is required to obtain a certain level of filtration, then a trapped perf/mesh/perf combination is recommended.

3 Filtration Level

When choosing a perf. or a mesh/perf. combination, attention should be given to ensure overstraining does not occur. As a general rule, the specified level of filtration should be no smaller than half the size of the particle to be removed. If too fine a filtration is specified, the pressure drop through the strainer will increase very rapidly, possibly causing damage to the screen.

Screen openings other than those shown above are readily available. Various mesh sizes as fine as 5 micron and perforated plate as coarse as 1/2" Dia. are in inventory.

Screens are available in a wide range of materials. Screens of carbon steel, stainless steel (304, 316), alloy 20, monel 400, hastelloy C and titanium grade 2 are in inventory.

Custom manufactured screens are available upon request. Please consult factory.

Basket Strainers

92 Series | Fabricated Basket Strainers


- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange Sizes from 2" to 36"



PRESSURE DROP | LIQUIDS


Fabricated Basket Strainers | 2" to 24"

Figure 1

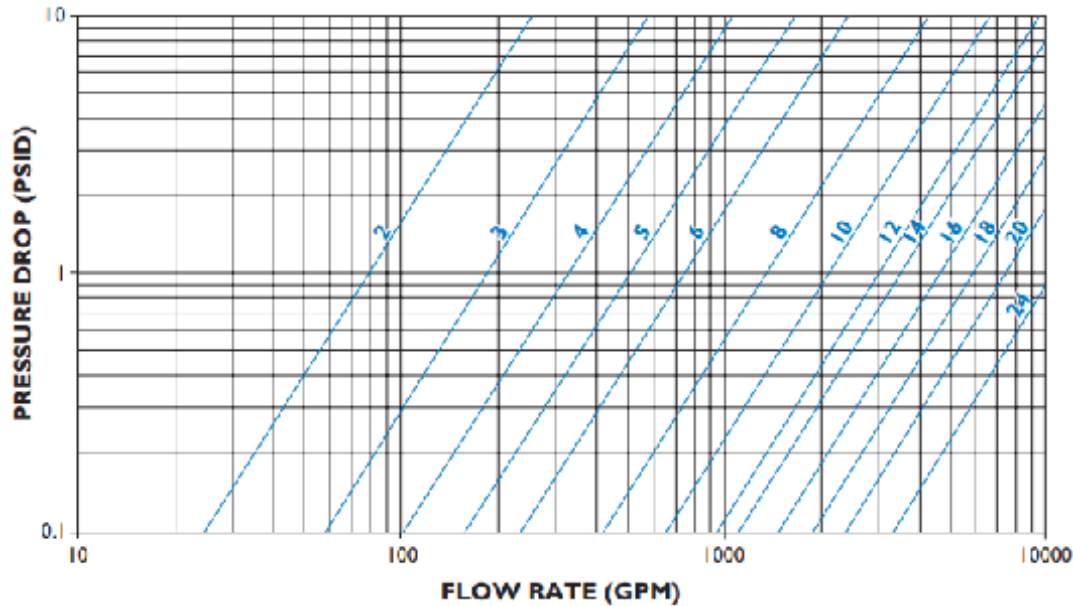

Fabricated Duplex Basket Strainers | 5" to 24"

Figure 2

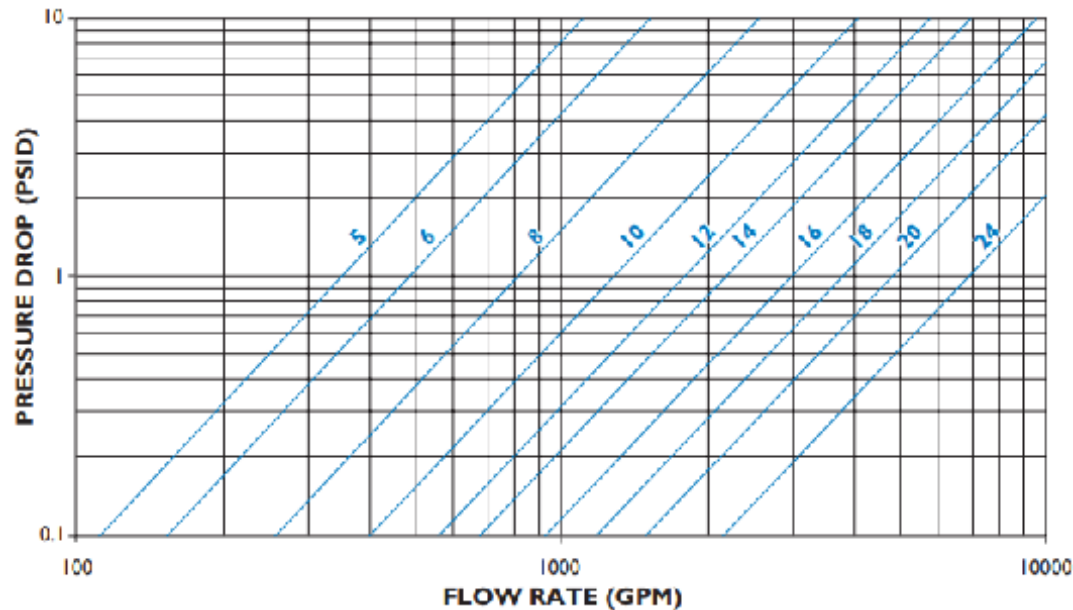

Notes:

Pressure drop curves are based on water flow with standard screens.

See Chart # 1 for correction factors to be used with other fluids and/or screen openings.



55 Stafford Court, Cambridge, ON N1T 1B3 P (519) 623-7448 F (519) 623-8807

For more information, e-mail: info@fil-trek.com or visit Fil-Trek.com

Basket Strainers

92 Series | Fabricated Basket Strainers


- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange Sizes from 2" to 36"



PRESSURE DROP | LIQUIDS


Fabricated T Strainers | 2" to 24"

Figure 3

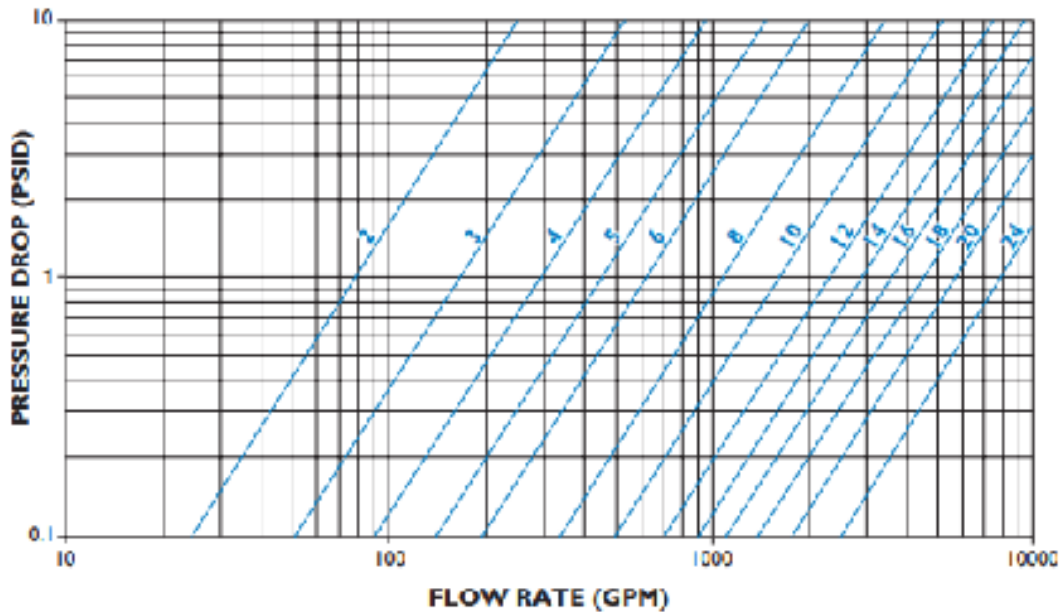

Fabricated Y Strainers | 2" to 24"

Figure 4

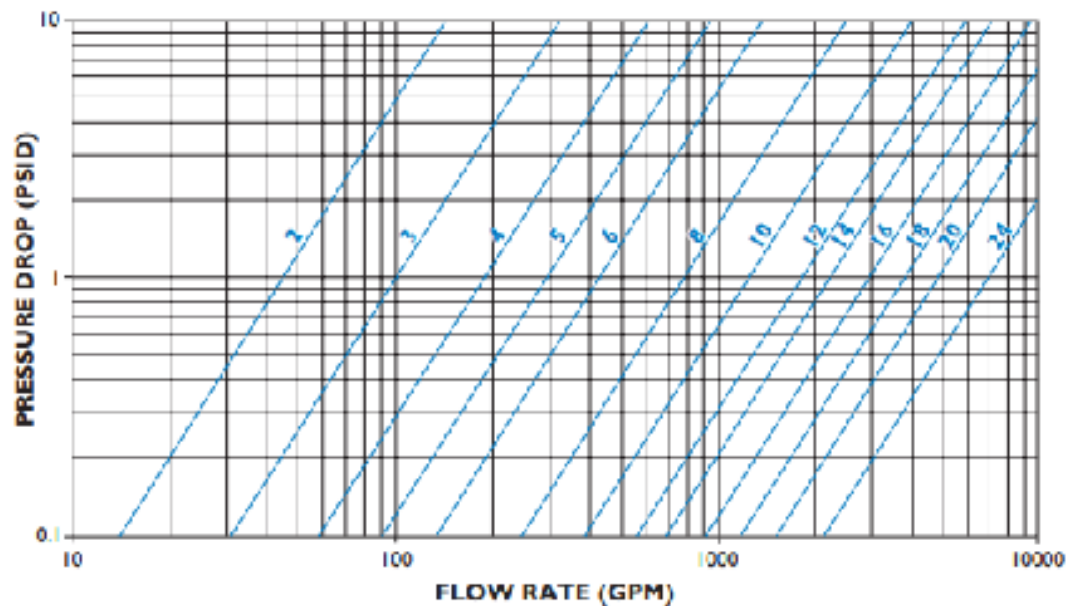

Notes:

Pressure drop curves are based on water flow with standard screens.

See Chart # 1 for correction factors to be used with other fluids and/or screen openings.



55 Stafford Court, Cambridge, ON N1T 1B3 P (519) 623-7448 F (519) 623-8807

For more information, e-mail: info@fil-trek.com or visit Fil-Trek.com

Basket Strainers

92 Series | Fabricated Basket Strainers


- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange Sizes from 2" to 36"



PRESSURE DROP | LIQUIDS


Temporary Strainers | 3/4" to 5"

Figure 5

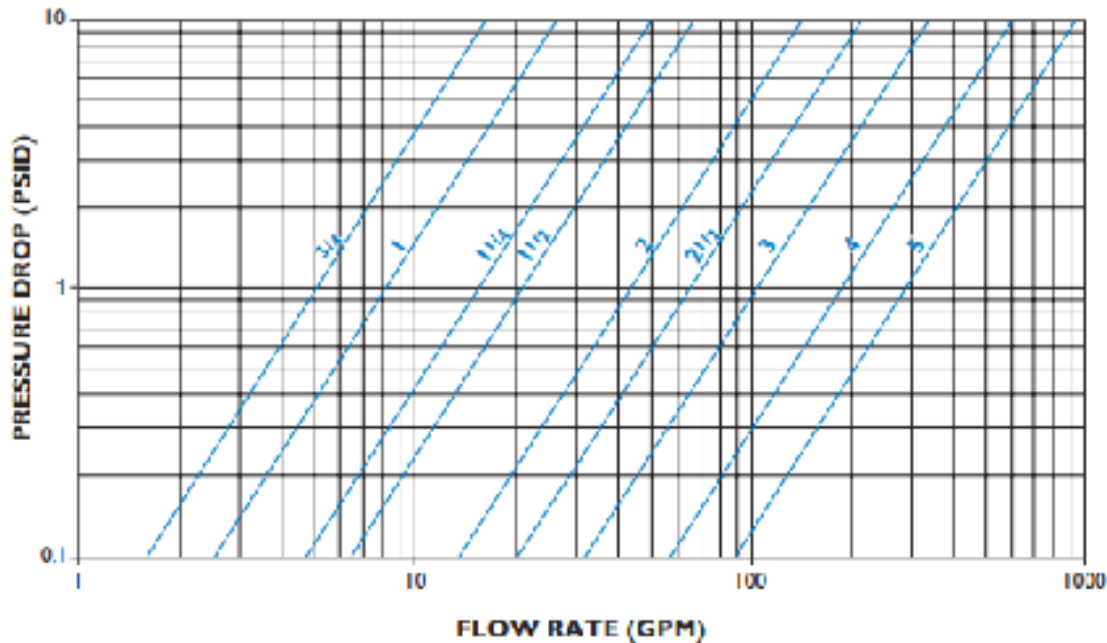

Temporary Strainers | 6" to 48"

Figure 6

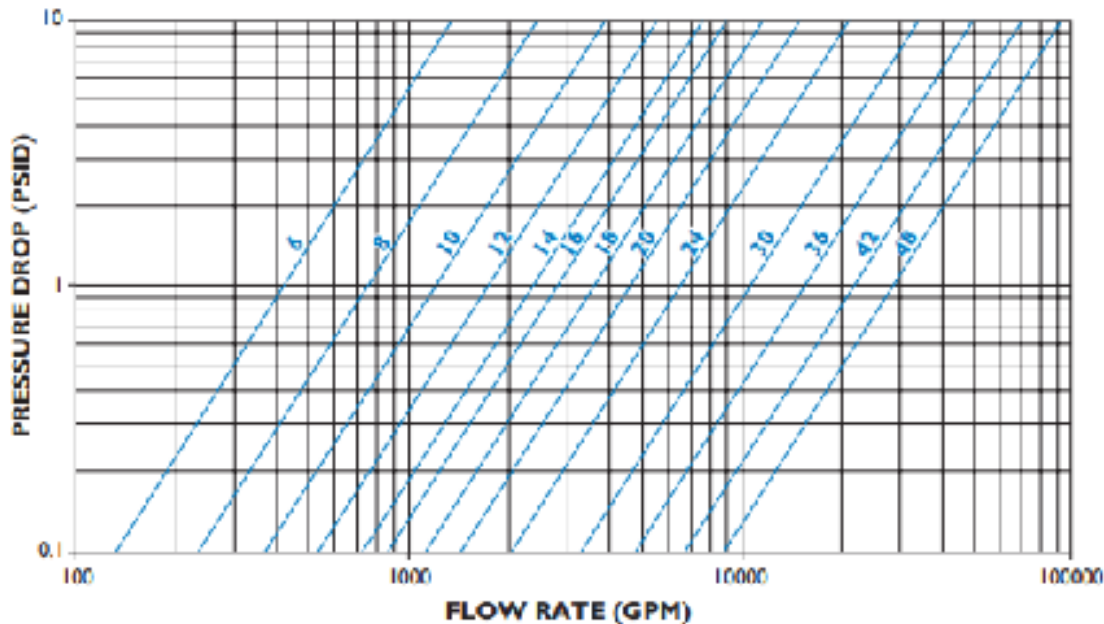

Notes:

Pressure drop curves are based on water flow with standard screens.

See Chart # 1 for correction factors to be used with other fluids and/or screen openings.



55 Stafford Court, Cambridge, ON N1T 1B3 P (519) 623-7448 F (519) 623-8807

For more information, e-mail: info@fil-trek.com or visit Fil-Trek.com

Basket Strainers

92 Series | Fabricated Basket Strainers

- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange Sizes from 2" to 36"



SCREEN CORRECTION FACTOR CHART

Non-Standard and Mesh Lined Screens

Chart # 1

SIZE RANGE	PERF. PLATE % SCREEN MATERIAL OPEN AREA					MESH LINED SCREENS % SCREEN MATERIAL OPENING AREA		
	60%	50%	40%	30%	20%	50%	40%	30%
1/4" to 1 1/2"	0.45	0.55	0.70	1.00	1.15	1.05	1.05	1.20
2" to 48"	0.65	0.80	1.00	1.40	2.15	1.05	1.05	1.20

BASKET STRAINER EXAMPLE

Strainer Size: 10"
Screen Size: 100 Mesh, 1/8" Perf
Flow Rate: 3000 GPM
Service: Water
Specific Gravity: 1
Viscosity: 100 cP

How To Calculate:

- 1) Use Figure 1 to get the pressure drop of the screen.
- 2) Refer to the Screen Opening chart to determine the % Open Area of the mesh/screen size being used.
- 3) Using the chart above, find the correction factor to be used.
- 4) Multiply the PSID by the correction factor to determine the total pressure drop.

Example:

RESULTS
 2.0
 30%
 1.20
 2.4
2.0 x 1.2 = 2.4 PSID clean

VISCOSITY & DENSITY CORRECTION FACTOR CHART

Chart # 2

SIZE RANGE	COMPONENT FACTOR (CF)
3/4" to 1 1/2"	0.25
2" to 48"	0.35

Chart # 3

VISCOSITY (cP)	BODY LOSS FACTOR (BF)	SCREEN LOSS FACTOR			
		PERF ONLY (PF)	20 MESH (MF)	30 to 40 MESH (MF)	60 to 300 MESH (MF)
10	1.0	1.15	1.20	1.40	1.50
25	1.2	1.25	2.00	2.20	2.50
100	1.6	1.40	3.00	4.00	6.50
200	2.2	1.50	4.50	7.00	11.50
500	4.4	1.60	10.00	15.00	25.00
1000	8.0	1.70	15.00	30.00	50.00
2000	15.0	1.90	30.00	60.00	100.00

How To Calculate:

- 1) Use the pressure drop (P1) through the strainer with water flow and standard or mesh screens from Chart # 1.
- 2) Multiply P1 by the specific gravity of the fluid actually flowing through the strainer to get P2.
- 3) Using Chart # 2 above, multiply P2 by the correct component factor to get P3.
- 4) Subtract P3 from P2 to equal P4.
- 5) Multiply P3 by the appropriate Body Loss factor from Chart # 3 above to get P5.
- 6) Multiply P4 by the appropriate Screen Loss factor from Chart # 3 above to get P6.
- 7) Total pressure drop will be P5 + P6 = P7.

RESULTS
 2.4
 2.4
 0.84
 1.56
 1.34
 10.14
Total Pressure Drop = 11.48 PSID clean

Basket Strainers

92 Series | Fabricated Basket Strainers

- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange Sizes from 2" to 36"



CORRECTION FACTORS

For Clogged Screens

Chart # 4

% CLOGGED	RATIO OF FREE SCREEN AREA TO PIPE AREA						
	10:1	8:1	6:1	4:1	3:1	2:1	1:1
10%	-	-	-	-	-	-	3.15
20%	-	-	-	-	-	1.15	3.90
30%	-	-	-	-	-	1.40	5.00
40%	-	-	-	-	-	1.80	6.65
50%	-	-	-	-	1.25	2.50	9.45
60%	-	-	-	1.15	1.80	3.70	14.50
70%	-	-	-	1.75	2.95	6.4	26.00
80%	-	1.10	1.75	3.60	6.25	14.00	58.00
90%	2.30	3.45	6.00	13.50	24.00	55.00	-

NOTES:

- See Figures 7 to 10 for the ratio of free area to pipe area for Fil-Trek strainers equipped with standard screens.
- For screens other than Fil-Trek standard, use the following formula to calculate the ratio free area to pipe area:

$$R = \frac{Ag \times OA}{100Ap}$$

where;
R = Ratio free area to pipe area
Ag = Gross screen area, sq. in. (see Figures 7 to 10)
OA = Open area of screen media, % (Screen Opening chart, i.e. 1/8" perf = 40%)
Ap = Nominal area of pipe fitting, sq. in. (see Figures 7 to 10)

STANDARD SCREEN EXAMPLE

T Strainer Size: 8"
Screen Size: 5/32" Perf
Flow Rate: 1000 GPM
Service: Water
% Clogged: 60%

How To Calculate:

- Find the pressure drop using Figure 3.
- Reference the ratio of free area to pipe area using Figure 9.
- Using Chart # 4 above, find the correction factor based on the % clogged.
- Calculate the total pressure drop by multiplying the pressure drop from step 1 with the correction factor from step 3.

RESULTS

0.9
1.3:1 (round down to 1:1)
3.9
0.9 x 3.9 = 3.51 PSID

NON STANDARD SCREEN EXAMPLE

T Strainer Size: 8"
Screen Size: 1/8" Perf
Flow Rate: 1000 GPM
Service: Water
% Clogged: 20%

How To Calculate:

- Find the pressure drop on page using Figure 3 with a standard screen size.
- Using the Screen Correction chart to determine the % of open area (OA) of 5/32" perf.
- See Chart # 1 to find the correction factor for 5/32" perf (round up).
- Multiply step 1 by the pressure drop from step 3.
- SINCE a non-standard screen is being used, use the formula above to calculate the Ratio free area to pipe area ($Ag = 167$, $OA = 58\%$, $Ap = 50.3$).
- Using the result from step 5, check Chart # 4 to find the correction factor.
- Multiply results from step 4 and step 6 to get the pressure drop when clogged.

RESULTS

0.9
58%
0.65
0.9 x 0.65 = 0.59 PSID
1.9:1 (round up to 2:1)
3.7
0.59 x 3.7 = 2.2 PSID



55 Stafford Court, Cambridge, ON N1T 1B3 P (519) 623-7448 F (519) 623-8807

For more information, e-mail: info@fil-trek.com or visit Fil-Trek.com

Basket Strainers

92 Series | Fabricated Basket Strainers

- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange Sizes from 2" to 36"



FABRICATED STRAINER SCREEN EFFECTIVE AREAS

Basket Strainers | 2" to 24"

Figure 7

PIPE SIZE (IN)	PERF. DIAMETER (IN)	NOM. AREA OF SCH 40/STD. PIPE (IN ²)	GROSS SCREEN AREA (IN ²)	FREE AREA (IN ²)	RATIO FREE AREA TO PIPE AREA (OAR)
2	1/8"	3.36	215	86	25.6
3	1/8"	7.39	265	106	14.3
4	1/8"	12.73	265	106	8.3
5	1/8"	20.01	380	152	7.6
6	1/8"	28.89	560	224	7.8
8	1/8"	50.03	570	228	4.6
10	1/8"	78.85	910	364	4.6
12	1/8"	113.10	1300	520	4.6
14	3/16"	140.50	1600	640	4.6
16	3/16"	185.66	1830	732	3.9
18	3/16"	237.10	2290	916	3.9
20	3/16"	294.83	2800	1120	3.8
24	3/16"	429.13	4090	1636	3.8

Duplex Basket Strainers | 2" to 24"

Figure 8

PIPE SIZE (IN)	PERF. DIAMETER (IN)	NOM. AREA OF SCH 40/STD. PIPE (IN ²)	GROSS SCREEN AREA (IN ²)	FREE AREA (IN ²)	RATIO FREE AREA TO PIPE AREA (OAR)
2	1/8"	3.36	215	86	25.6
3	1/8"	7.39	265	106	14.3
4	1/8"	12.73	265	106	8.3
5	1/8"	20.01	380	152	7.6
6	1/8"	28.89	560	224	7.8
8	1/8"	50.03	570	228	4.6
10	1/8"	78.85	910	364	4.6
12	1/8"	113.10	1300	520	4.6
14	3/16"	140.50	1600	640	4.6
16	3/16"	185.66	1830	732	3.9
18	3/16"	237.10	2290	916	3.9
20	3/16"	294.83	2800	1120	3.8
24	3/16"	429.13	4090	1636	3.8

OAR = Free Screen Area / Inlet Area

Free Screen Area = Opening % x Gross Screen Area

Values shown are approximate. Consult factory for exact ratios.



55 Stafford Court, Cambridge, ON N1T 1B3 P (519) 623-7448 F (519) 623-8807

For more information, e-mail: info@fil-trek.com or visit Fil-Trek.com

Basket Strainers

92 Series | Fabricated Basket Strainers

- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange Sizes from 2" to 36"



FABRICATED STRAINER SCREEN EFFECTIVE AREAS

T Strainers | 2" to 24"

Figure 9

PIPE SIZE (IN)	PERF. DIAMETER (IN)	NOM. AREA OF SCH 40/STD. PIPE (IN ²)	GROSS SCREEN AREA (IN ²)	FREE AREA (IN ²)	RATIO FREE AREA TO PIPE AREA (OAR)
2	1/8"	3.36	22	9	2.6
3	1/8"	7.39	40	16	2.2
4	1/8"	12.73	58	23	1.8
5	1/8"	20.01	82	33	1.6
6	1/8"	28.89	105	42	1.5
8	1/8"	50.03	167	67	1.3
10	1/8"	78.85	235	94	1.2
12	1/8"	113.10	330	132	1.2
14	3/16"	140.50	420	168	1.2
16	3/16"	185.66	510	204	1.1
18	3/16"	237.1	640	256	1.1
20	3/16"	294.83	780	312	1.1
24	3/16"	429.13	1060	424	1.0

Y Basket Strainers | 2" to 24"

Figure 10

PIPE SIZE (IN)	PERF. DIAMETER (IN)	NOM. AREA OF SCH 40/STD. PIPE (IN ²)	GROSS SCREEN AREA (IN ²)	FREE AREA (IN ²)	RATIO FREE AREA TO PIPE AREA (OAR)
2	1/8"	3.36	39	16	4.6
3	1/8"	7.39	77	31	4.2
4	1/8"	12.73	135	54	4.2
5	1/8"	20.01	160	64	3.2
6	1/8"	28.89	215	86	3.0
8	1/8"	50.03	375	150	3.0
10	1/8"	78.85	545	218	2.8
12	1/8"	113.10	785	314	2.8
14	3/16"	140.50	900	360	2.6
16	3/16"	185.66	1210	484	2.6
18	3/16"	237.1	1560	625	2.6
20	3/16"	294.83	1950	780	2.6
24	3/16"	429.13	2765	1106	2.6

OAR = Free Screen Area / Inlet Area

Free Screen Area = Opening % x Gross Screen Area

Values shown are approximate. Consult factory for exact ratios.

Basket Strainers

92 Series | Fabricated Basket Strainers

- Carbon or Stainless Steel
- Flanged or Butt Weld
- Flange Sizes from 2" to 36"



INSTALLATION AND MAINTENANCE INSTRUCTIONS

Strainer installation instructions

- Ensure all machined surfaces are free of defects and that the inside of the strainer is free of foreign objects.
- For horizontal and vertical pipelines, the strainer should be installed so that the blow-down drain connection is pointed downward.
- For flanged end strainers, the flange bolting should be tightened gradually in a back and forth clockwise motion. Threaded end strainers should use an appropriate sealant.
- Once installed, increase line pressure gradually and check for leakage around joints.
- If the strainer is supplied with a start-up screen, monitor pressure drop carefully.

Screen removal instructions

- Drain piping
- Vent line to relieve pressure.
- Loosen cover and open to access screen.
- Remove, clean and replace screen in original position (Note: In some instances, a high pressure water jet or steam may be required for effective cleaning)
- Inspect cover gasket for damage. If necessary, replace. (Note: If spiral wound gaskets have been used, they must be replaced and can not be used again)
- Tighten cover. The strainer is ready for line startup.

CAUTION SHOULD BE TAKEN DUE TO POSSIBLE EMISSION OF PROCESS MATERIAL FROM PIPING. ALWAYS ENSURE NO LINE PRESSURE EXISTS WHEN OPENING COVER

Maintenance instructions

For maximum efficiency, determine the length of time it takes for the pressure drop to double that in the clean condition. Once the pressure drop reaches an unacceptable value, shut down line and follow the "Screen Removal Instructions" above. A pressure gauge installed before and after the strainer in-line will indicate pressure loss due to clogging and may be used to determine when cleaning is required.

Trouble shooting guides and diagnostic techniques

- After pressurizing, inspect cover and other joints for leakage. Gasket replacement or cover tightening is necessary if leakage occurs.
- If the required filtration is not taking place, ensure the screen is installed in the correct position, that being flush to the screen seating surfaces.

WARNING

This product operates in pipelines or with equipment that carries fluids and/or gasses at elevated temperatures and pressures. Caution should be taken to make sure that this equipment is installed correctly and inspected regularly. Caution should also be taken to protect personnel from fluid or gas leakage.